#### Wie wird der Mikrowechselrichter über das Internet für den Router konfiguriert?

1. Schalten Sie das drahtlose Netzwerk Ihres PCs/Handys ein.

2. Wählen Sie das Logger-Netzwerk (Netzwerkname: AP+SN) und stellen Sie eine Verbindung her. Das Standardpasswort lautet 12345678.



3. Öffnen Sie einen Browser und geben Sie 10.10.100.254 ein. Sowohl der Benutzername als auch das Passwort lauten admin. (Empfohlene Browser: IE 8+, Chrome 15+, Firefox 10+)

_	0	http://10.10.100.254 Please input username and password."USER LOGIN"	
Status	Username:	admin	
Wizard	Password:		
Quick Set		Sure Cancel	
Advanced			
Upgrade			

4. Der Browser geht zur "Status"-Seite mit den Grundinformationen.

Wizard	- Inverter information	
Quick Set		
Advanced	Firmware version(main)	
Advanced	Firmware version(slave)	
Upgrade	Inverter model	
Restart	Rated power	W
Reset	Current power	W
	Yield today	kW
	Current power	kW
	Alerts	
	Last updated	
	Device serial number Firmware version	170401324 LSW3_14_FFFF_1.0.2
	Device serial number Firmware version Wireless AP mode	170401324 LSW3_14_FFFF_1.0.2 Enabl
	Device serial number Firmware version Wireless AP mode SSID	170401324 LSW3_14_FFFF_1.0.2 Enabl AP_170401324
	Device serial number Firmware version Wireless AP mode SSID IP address	170401324 LSW3_14_FFFF_1.0.2 Enabl AP_170401324 10.10.100.25
	Device serial number Firmware version Wireless AP mode SSID IP address MAC address	170401324 LSW3_14_FFFF_1.0.2 Enabl AP_170401324 10.10.100.25 8C:D8:B3:71:8D:B
	Device serial number Firmware version Wireless AP mode SSID IP address MAC address Wireless STA mode	170401324 LSW3_14_FFFF_1.0.2 Enabl AP_170401324 10.10.100.25 8C:D8:B3:71:8D:B Disabl
	Device serial number Firmware version Wireless AP mode SSID IP address MAC address Wireless STA mode Router SSID	170401324 LSW3_14_FFFF_1.0.2 Enabl AP_170401324 10.10.100.25 8C:D8:B3:71:8D:B Disabl
	Device serial number Firmware version Wireless AP mode SSID IP address MAC address Wireless STA mode Router SSID Signal Quality	170401324 LSW3_14_FFFF_1.0.2 Enabl AP_170401324 10.10.100.25 8C:D8:B3:71:8D:B Disabl
	Device serial number Firmware version Wireless AP mode SSID IP address MAC address Wireless STA mode Router SSID Signal Quality IP address	170401324 LSW3_14_FFFF_1.0.2 Enabl AP_170401324 10.10.100.25 8C:D8:B3:71:8D:B Disabl
	Device serial number Firmware version Wireless AP mode SSID IP address MAC address Wireless STA mode Router SSID Signal Quality IP address MAC address	170401324 LSW3_14_FFFF_1.0.2 Enab AP_170401324 10.10.100.25 8C:D8:B3:71:8D:E Disab
	Device serial number Firmware version Wireless AP mode SSID IP address MAC address Wireless STA mode Router SSID Signal Quality IP address MAC address AC address AC address AC address	170401324 LSW3_14_FFFF_1.0.2 Enabl AP_170401324 10.10.100.25 8C:D8:B3:71:8D:B Disabl
	Device serial number         Firmware version         Wireless AP mode         SSID         IP address         MAC address         Wireless STA mode         Router SSID         Signal Quality         IP address         MAC address         Router SSID         Signal Quality         IP address         MAC address         Server information         Remote server A	170401324 LSW3_14_FFFF_1.0.2 Enabl AP_170401324 10.10.100.25 8C:D8:B3:71:8D:B Disabl

5. Klicke Sie auf "Wizard", dann auf Aktualisieren und suchen Sie ihr WLAN-Netzwerk. Wählen Sie ihr WLAN-Netzwerk aus und stellen Sie eine Verbindung her.

Nizard	IE-2.4G-TEST	54:A7:3:70:99:13	82	1		~
Quick Set		0:BE:D5:20:B8:20	80	1	-	
	O AP 1753738492	30:EA:E7:36:B:36	78	2	-	
Advanced	O IGEN office 2.4G	0:BE:D5:20:B8:20	76	1	-	
Ingrada	GIGENTEST	E8:65:D4:F2:15:B	8 74	6	-	
opgrade	ŏ	90:5D:7C:97:95:2	74	1		
Restart	O IGEN office 2.4G	90:5D:7C:97:95:2	7 72	1		
	Ŏ.	90:5D:7C:97:C9:E	5 72	1		
Reset	O AP_1719065936	30:EA:E7:36:CF:E	2 70	1		
	O IGEN office 2.4G	90:5D:7C:97:C9:E	3 70	1		
	○ TESR+**? =, ;	4A:E:EC:9E:C3:31	70	11		
	O ICEN office 24C	0-BE-D5-20-B7-EE	66	11		
	Note: When RSSI of the se connection may be unstable shorten the distance between	elected WiFi network is lower the le,please select other available sen the device and router.	an 15° netwo	%,the rk or		×
	Note: When RSSI of the se connection may be unstable shorten the distance between	elected WiFi network is lower the le,please select other available aren the device and router.	an 15º netwo	1 %,the rk or resh		×.
	AD E4707E0EE     * Note: When RSSI of the se connection may be unstabl shorten the distance betwee     Add wireless network mar	elected WiFi network is lower the le,please select other available een the device and router.	an 15 <sup>o</sup> netwo	nk or		~
	AD EXTOTEORE     * Note: When RSSI of the seconnection may be unstable shorten the distance between shorten the distance between Add wireless network mare Network name (SSID) (Note:case sensitive)	elected WiFi network is lower the le,please select other available even the device and router.	an 15 <sup>o</sup> netwo	1 %,the rk or resh		~
	AD EXTOTEORE * Note: When RSSI of the set connection may be unstable shorten the distance between Add wireless network mare Network name (SSID) (Note:case sensitive) Encryption method	elected WiFi network is lower the le,please select other available en the device and router.	an 15 <sup>c</sup> netwo	4 %,the rk or resh		~
	AD EXTOTEORE * Note: When RSSI of the seconnection may be unstable shorten the distance between Add wireless network mare Network name (SSID) (Note:case sensitive) Encryption method Encryption algorithm	elected WiFi network is lower the le,please select other available aren the device and router.	Ref	rk or		*

6. Geben Sie das Passwort ihres WLAN-Netwerks ein und klicken Sie auf (Next).



7. Sie können die folgenden Optionen auswählen, um die Sicherheit zu erhöhen, und klicken Sie auf Weiter.



8. Nach erfolgreicher Installation erscheint die folgende Seite. Klicken Sie auf OK zum Neu-Start des Wechselrichters



 Stellen Sie eine Verbindung mit dem AP-Netzwerk des Mikrowechselrichters her, melden Sie sich erneut unter 10.10.100.254 an und überprüfen Sie hier die Systeminformationen.
 Nachdem die Netzwerkeinstellungen vorgenommen wurden, ist der STA-Modus des drahtlosen Netzwerks aktiviert. Die Informationen über den Router werden auf der Seite angezeigt und der Remote-Server A ist verbindungsfähig.

zard	<ul> <li>Inverter information</li> </ul>	
	Inverter serial number	
ick Set	Firmware version(main)	
anced	Firmware version(slave)	
rade	Inverter model	
art	Rated power	W
locat	Current power	W
eset	Yield today	kWh
	Current power	kWh
	Alerts	
	Last updated	
	Firmware version	LSW3_14_FFFF_1.0.23
	Device serial number	1704013242
	Missions AD made	LOW0_14_FFFF_1.0.20
	vvireless AP mode	Disable
	000	statere
	SSID	
	IP address MAC address	
	SSID IP address MAC address Wireless STA mode	Enable
	SSID IP address MAC address Wireless STA mode Router SSID	Enable IE-2.4G-TEST
	SSID IP address MAC address Wireless STA mode Router SSID Signal Quality	Enable IE-2.4G-TEST 100%
	SSID IP address MAC address Wireless STA mode Router SSID Signal Quality IP address	Enable IE-2.4G-TEST 100% 172.16.30.247
	SSID IP address MAC address Wireless STA mode Router SSID Signal Quality IP address MAC address	Enable IE-2.4G-TEST 100% 172.16.30.247 98:D8:63:71:8D:B0
	SSID IP address MAC address Wireless STA mode Router SSID Signal Quality IP address MAC address	Enable IE-2.4G-TEST 100% 172.16.30.247 98:D8:63:71:8D:B0
	SSID IP address MAC address Wireless STA mode Router SSID Signal Quality IP address MAC address MAC address MAC address	Enable IE-2.4G-TEST 100% 172.16.30.247 98:D8:63:71:8D:B0 connected

10. Wenn beide Remote-Server A und B "Nicht verbunden" sind, aktualisieren Sie die Seite oder wiederholen Sie die vorherigen Schritte. Wenn die "Signalqualität" unter 40% liegt, stellen Sie den Router näher zum Mikrowechselrichter.

### Wie verbindet man die App?

### 1. Registrierung

Öffnen Sie die App "SOLARMAN Smart" und registrieren Sie ein Konto. Klicken Sie auf "Register" und erstellen Sie Ihr Konto.

•••	< Registrieren	
SOLARMAN Smart	E-Mail	Rufn
E-Mail Rufnummer Benutzername		
E-Mail	E-Mail	
E-Mail	E-Mail	
Passwort	Überprufüngscode	_
passwprt	Überprufüngscode	Se
	Passwort	
	Passwort	
Einloggen	Mindestens 6 Zeichen	
trieren Sie ein neues Konto Passwort vergessen?		

# 2. Eine Anlage erstellen

Klicken Sie auf "Jetzt hinzufügen", um Ihre Anlage anzulegen. Geben Sie hier die Grunddaten der Anlage und weitere Info ein.



Bene

Bi

Bi

### 3. Einen Logger hinzufügen

Option 1: Geben Sie die Logger-SN manuell ein.

Option 2: Klicken Sie auf das rechte Symbol, scannen den QR-Code für SN. Sie finden die Logger-SN

auf der Verpackung oder am Logger-Gehäuse. (kleiner Aufkleber)

Folgen Sie den weiteren Schritten um die Einrichtung abzuschließen.



### 4. Fertig

Der Deye Wechselrichtet ist nun online.



## HINWEISE

- 5GHz-Wifi wird nicht unterstützt
- Sonderzeichen in Routernamen oder Passwort werden nicht unterstützt.